

1 MODEL VRK5874 – VALVE REPAIR KIT (INCLUDES THESE ITEMS) ALSO USED ON 5874PB

**INSTALLATION INSTRUCTIONS FOR 5874SS W/PBA6 SERIES**

- 1.) INSERT VALVE INTO FOUNTAIN FROM INSIDE.
- 2.) THREAD LARGE RING NUT ONTO VALVE BODY, APPROX. 1" INTO VALVE.
- 3.) PLACE WAVE WASHER INSIDE OF FLANGED PUSH-BUTTON ASSY.
- 4.) APPLY ONE (1) DOT OF LOCTITE 222MS, ON THE FEMALE THREADS OF BUTTON ASSEMBLY, LEAVING THE FIRST AND LAST THREADS FREE. (FIGURE 1), CAUTION: EXCESS LOCTITE CAN CAUSE THREADS TO LOCK VERY TIGHTLY, MAKING REPAIRS DIFFICULT.
- 5.) THREAD FLANGED PUSH-BUTTON ASSY. ON VALVE UNTIL WAVE WASHER MAKES CONTACT WITH STEM OF CARTRIDGE. CAUTION: DO NOT HAND TIGHTEN.
- 6.) UNTHREAD LARGE RING NUT FORWARD, UNTIL IT STOPS FLUSH WITH FLANGED PUSH-BUTTON ASSY.
- 7.) PUSH VALVE BACK TOWARD THE INSIDE OF FOUNTAIN AND TIGHTEN LOCK NUT. (SEE ILLUSTRATION ABOVE.)
- 8.) TIGHTEN FLANGED PUSH-BUTTON ASSY. USING UNIVERSAL SPANNER WRENCH PROVIDED.

\*APPLY 1 DOT OF LOCTITE 222MS

\*THIS ALSO APPLIES TO PBA6 AND PBA6HPB


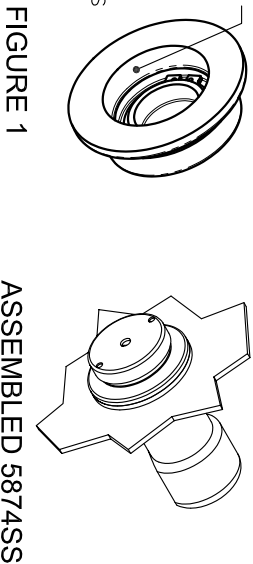


FIGURE 1

ASSEMBLED 5874SS

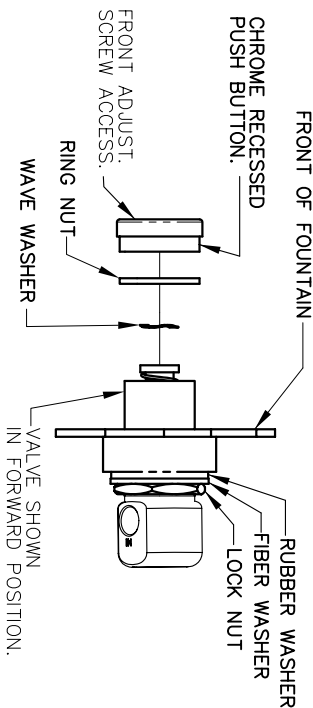

**INSTALLATION INSTRUCTIONS FOR 5874SS W/PBAZ**

- 1.) VERIFY THAT LOCK NUT, FIBER AND RUBBER WASHERS ARE AT BOTTOM OF VALVE.
- 2.) INSERT VALVE INTO FOUNTAIN FROM INSIDE, AND PUSH FORWARD (SEE ILLUSTRATION ABOVE).
- 3.) THREAD RING NUT ONTO VALVE BODY, AS FAR AS POSSIBLE TOWARDS FRONT OF FOUNTAIN.
- 4.) PLACE WAVE WASHER INSIDE OF FLANGED PUSH-BUTTON ASSY.
- 5.) APPLY ONE (1) DOT OF LOCTITE 222MS, ON THE FEMALE THREADS OF BUTTON ASSEMBLY, LEAVING THE FIRST AND LAST THREADS FREE. (FIGURE 2), CAUTION: EXCESS LOCTITE CAN CAUSE THREADS TO LOCK VERY TIGHTLY, MAKING REPAIRS DIFFICULT.
- 6.) THREAD PUSH-BUTTON ASSY. ON VALVE UNTIL WAVE WASHER MAKES CONTACT WITH STEM OF CARTRIDGE. CAUTION: DO NOT HAND TIGHTEN.
- 7.) UNTHREAD RING NUT FORWARD, UNTIL IT STOPS FLUSH WITH PUSH-BUTTON ASSY.
- 8.) PUSH VALVE BACK TOWARD THE INSIDE OF FOUNTAIN AND TIGHTEN LOCK NUT. (SEE ILLUSTRATION ABOVE.)
- 9.) TIGHTEN PUSH-BUTTON ASSY. USING UNIVERSAL SPANNER WRENCH PROVIDED.

\*APPLY 1 DOT OF LOCTITE 222MS

\*THIS ALSO APPLIES TO PBA7

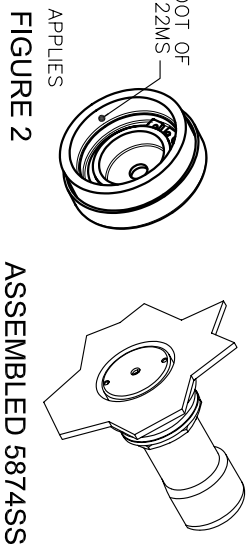


FIGURE 2

ASSEMBLED 5874SS

<b>Haws Corporation</b>		1455 KLEPPE LANE	
SPARKS, NEVADA 89431		(775) 359-4712 FAX (775) 359-7424	
E-MAIL: HAWS@HAWS.CO.COM		WEBSITE: WWW.HAWS.CO.COM	
MODEL(S): 5874SS/5874PB/5874PBF/V/RK5874/PBA6/PBA6HPB/PBA7	INEO FAX DOC #: 2587477	PART NO: 15874A00	QTY: 1
DATE: 04/09/09	APPROVED:	SHEET: 1 OF 1	REV: 1